

CARE & MAINTENANCE

Oropesa Toilet with Tank | Product code: BAT4562

Routine cleaning

- 1 Flush after use and clean the glazed porcelain regularly with warm water, a soft cloth or non-scratch sponge, and a mild pH-neutral bathroom cleaner.
- 2 Apply toilet cleaner only as directed and only to the ceramic bowl. Rinse thoroughly; do not allow cleaner to remain on the seat, hinges or external fittings.
- 3 Clean the thermoset seat and cover with mild soapy water and a soft cloth, then rinse and dry. Use the quick-release feature only in accordance with the seat instructions.
- 4 Wipe external surfaces and hinges dry to reduce water marks and deposits.

Avoid

- 1 Abrasive powders, scouring pads, wire wool, solvents and undiluted or unsuitable chemicals.
- 2 Mixing bleach, descaler, acid cleaners or other cleaning products; dangerous fumes can result.
- 3 Leaving cleaner beneath the seat or on hinges, seals, buttons or coloured components.
- 4 Standing on the WC, slamming the seat, heavy impact, boiling water and sudden extreme temperature changes.

Ongoing checks

Inspect the seat fixings, silicone joints, water supply and waste connections regularly. Repair movement or leaks immediately. For a wall-hung WC, also follow the concealed frame, cistern and flush-plate manufacturers' maintenance instructions.

SUPPLIED

WC pan, cistern, dual-flush mechanism and removable thermoset soft-close seat and cover are supplied. Connection components, isolation valve, installation materials and plumbing are sold separately unless expressly included in the order.