
BP609C

Installation Instructions



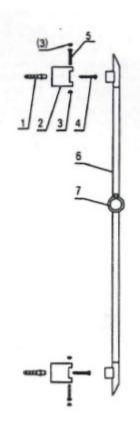

No	Item	Qty
1	Rawl plug	2
2	Fixing Plate	2
3	Cover	4
4	Screw (Wall)	2
5	Bolt	2
6	Sliding Rail	1
7	Sliding Shower Hook	1

Care Information





Take care not to scratch the product during installation.


Do Not overtighten the screws as this can damage the fixing plates.


Clean with water and mild soap. Rinse with clean water then polish with a suitable dry cloth.

DO NOT USE ANY ACIDS OR SCRUBBING DETERGENTS







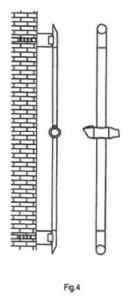



Drill two 6mm dia holes, 734mm apart and insert the rawl plugs.

As in FIG 1 remove cover (3), and loosen bolts (5).

As in FIG 2 Fix the mounting plates (2) to the wall.

As in FIG 3 Install the sliding rod with the sliding shower hook inserted, then tighten bolts (5), then put in covers (3)